
 


a to most greenhouses

From the inside of the greenhouse open arms of auto vent slightly. Place window bracket on arm B onto window frame and secure with two 3/8" self tapping screws (screw A).

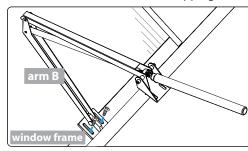





Carefully push upper handle B down until window closes completely. Turn cylinder clockwise until threaded area of cylinder is centered to set collar as shown.

IMPORTANT: Tighten the cylinder when you finish or the auto vent will not function.

Place frame bracket on arm A onto window sill just below frame bracket and secure with two 1" self tapping screws (screw B). Note: If your sill is thinner use the extra set of screw A provided in the package.

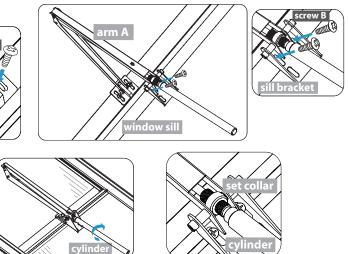

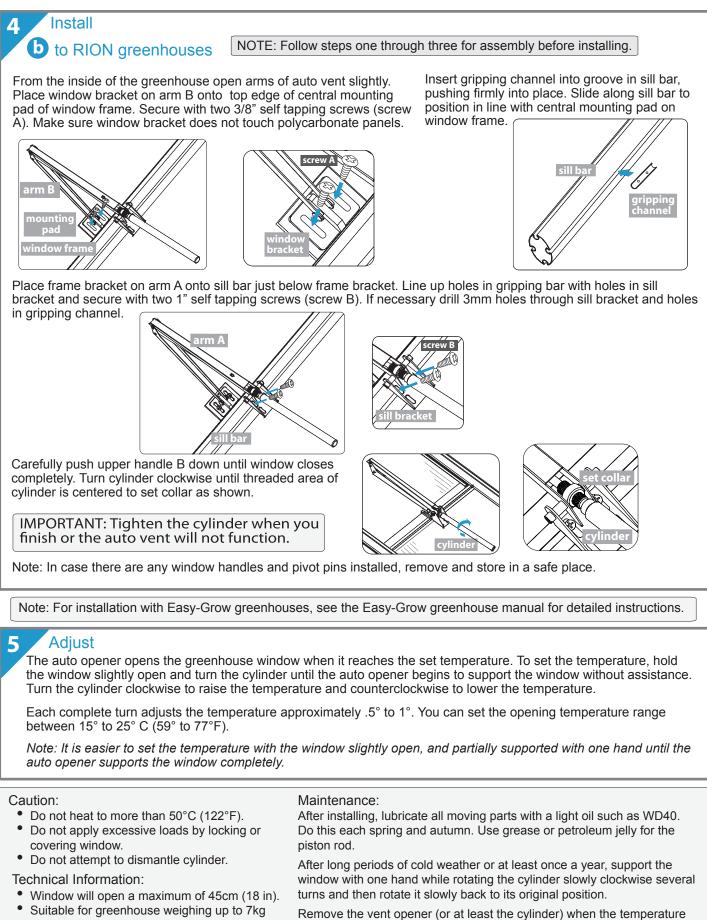

- (15lb)
 Opening tempterature range can be adjusted
- Opening tempterature range can be adjusted between 15° and 25° C (59° and 77° F).

If you have any questions please contact our Customer Service department. Thank you for your business!



Systems Trading Corporation 450 7th Avenue Suite 2809, New York, NY 10123 Customer Service: (877) 407-9100 ext 1 Email: customerservice@stcaustin.com

in the greenhouse exceeds 50°C/122°F or if you are not going to be

lubricate the piston rod to ensure moves smoothly.

using it for a long period of time. Store in a dry place. Before re-installing,